

1



 Sandstone
731 Floriani Poly
866.40 mm



Before proceeding, place the applique fabric over the placement line. If fabric isn't precut to size and is to instead be cut away after tacked down, make sure the fabric is at least 1/2" larger on each side of the line.

2



 Tutledove
720 Floriani Poly
866.40 mm




Before proceeding, cut the excess fabric around the outside of the tackdown stitch. This step is not necessary if the fabric was cut to size prior to doing the embroidery.

3




 Green Mist
219 Floriani Poly
11983.61 mm

4

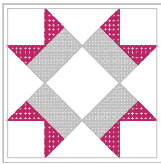

 Rose Petal
1703 Floriani Poly
8334.70 mm

5

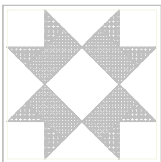

 Sandstone
731 Floriani Poly
817.60 mm