


## Color Analysis

1

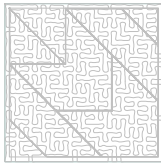


Green Mist  
219 Floriani Poly  
866.40 mm



Before proceeding, place the applique fabric over the placement line. If fabric isn't precut to size and is to instead be cut away after tacked down, make sure the fabric is at least  $\frac{1}{2}$ " larger on each side of the line.

6

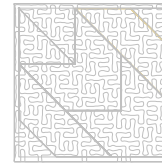


Wood Ash  
421 Floriani Poly  
799.46 mm



Before proceeding, cut the excess fabric around the outside of the tackdown stitch. This step is not necessary if the fabric was cut to size prior to doing the embroidery.

2

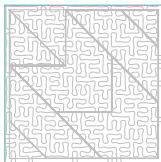


Seaform  
291 Floriani Poly  
866.40 mm



Before proceeding, cut the excess fabric around the outside of the tackdown stitch. This step is not necessary if the fabric was cut to size prior to doing the embroidery.

7

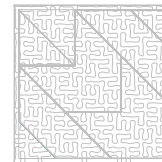


Gettysburg  
312 Floriani Poly  
406.28 mm



Before proceeding, place the applique fabric over the placement line. If fabric isn't precut to size and is to instead be cut away after tacked down, make sure the fabric is at least  $\frac{1}{2}$ " larger on each side of the line.

3

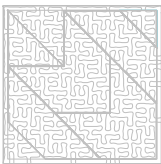


Indian Ocean  
376 Floriani Poly  
175.72 mm



Before proceeding, place the applique fabric over the placement line. If fabric isn't precut to size and is to instead be cut away after tacked down, make sure the fabric is at least  $\frac{1}{2}$ " larger on each side of the line.

8

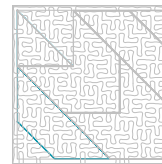


Indian Ocean  
376 Floriani Poly  
1213.75 mm



Before proceeding, cut the excess fabric around the outside of the tackdown stitch. This step is not necessary if the fabric was cut to size prior to doing the embroidery.

4

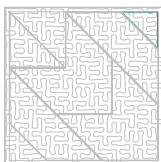


Gettysburg  
312 Floriani Poly  
339.02 mm



Before proceeding, cut the excess fabric around the outside of the tackdown stitch. This step is not necessary if the fabric was cut to size prior to doing the embroidery.

9

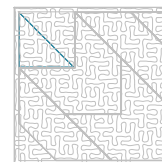


Gettysburg  
312 Floriani Poly  
512.31 mm



Before proceeding, place the applique fabric over the placement line. If fabric isn't precut to size and is to instead be cut away after tacked down, make sure the fabric is at least  $\frac{1}{2}$ " larger on each side of the line.

5

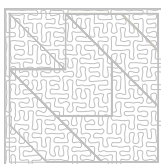


Oak Bluff  
734 Floriani Poly  
406.29 mm



Before proceeding, place the applique fabric over the placement line. If fabric isn't precut to size and is to instead be cut away after tacked down, make sure the fabric is at least  $\frac{1}{2}$ " larger on each side of the line.

10

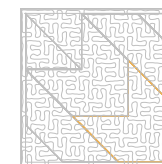


Sweet Melon  
751 Floriani Poly  
1448.23 mm



Before proceeding, place the applique fabric over the placement line. If fabric isn't precut to size and is to instead be cut away after tacked down, make sure the fabric is at least  $\frac{1}{2}$ " larger on each side of the line.



11

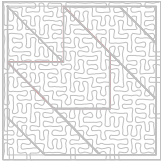


Light Mulberry  
1600 Floriani Poly  
486.68 mm



Before proceeding, place the applique fabric over the placement line. If fabric isn't precut to size and is to instead be cut away after tacked down, make sure the fabric is at least ½" larger on each side of the line.

12

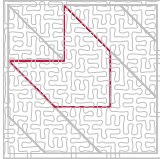


Deep Pink  
129 Floriani Poly  
960.04 mm



Before proceeding, cut the excess fabric around the outside of the tackdown stitch. This step is not necessary if the fabric was cut to size prior to doing the embroidery.

13

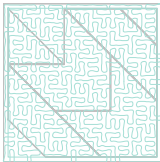

Green Mist  
219 Floriani Poly  
9153.47 mm