


## Color Analysis

1

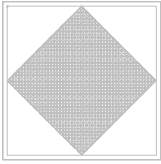



 Delicate Pearl  
482 Floriani Poly  
866.00 mm



Before proceeding, place the applique fabric over the placement line. If fabric isn't precut to size and is to instead be cut away after tacked down, make sure the fabric is at least 1/2" larger on each side of the line.

2

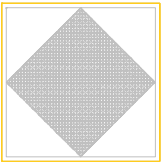



 Indian Orange  
4 Floriani Poly  
1729.60 mm




Before proceeding, cut the excess fabric around the outside of the tackdown stitch. This step is not necessary if the fabric was cut to size prior to doing the embroidery.


3

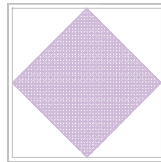

 Amethyst  
672 Floriani Poly  
20427.97 mm

4

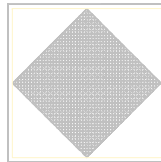

 Cream  
540 Floriani Poly  
817.60 mm